

VLS PLS ILS PRINTER DRIVER INSTALLATION

MAKE SURE THE USB CABLE IS UNPLUGGED BETWEEN THE COMPUTER AND THE ENGRAVER AT EITHER END BEFORE STARTING.

UNINSTALL THE OLD DRIVER (If Applicable):

1. Close the UCP
2. START > ALL PROGRAMS > ULS > UNINSTALL

If you have an older version driver, the uninstall may be under:

START > ALL PROGRAMS > ILS ENGRAVER > UNINSTALL

START > ALL PROGRAMS > ULS ENGRAVER > UNINSTALL

START > ALL PROGRAMS > UCP > UNINSTALL

INSTALL THE STANDARD DRIVER:

Download the attached file and change its extension from .eee to .exe - you now have the installer file UcpInst-5.xx.xx.xx.exe

Double click on this to run the installer, select the proper machine model and all the default choices.

When this finishes, the pc will prompt for reboot, reboot the pc

When the pc reboots, plug the USB cable back into the engraver. You will probably get a "New Hardware Found" message - open the wizard and select all the defaults. Select "Install Automatically" or similar choice when prompted. When this finishes you are ready to run.

When you see a warning about not passing Windows Logo Testing, click "Continue Anyway."

You may or may not see a second "New Hardware Found" wizard - if so, repeat the process above.